

internet

VIA

your

T.V.

NetStation



NetStation QuickStart Guide

NetStation



Setting up your *NetStation*

Follow these basic steps to use your NetStation® with a standard TV


In addition to your NetStation® kit you will need:


- a TV with a SCART socket.
- a nearby phone socket.
- a spare mains electricity socket.

If your TV does not have a SCART socket or you wish to connect other devices as well, refer to Appendix A of the NetStation® guide.

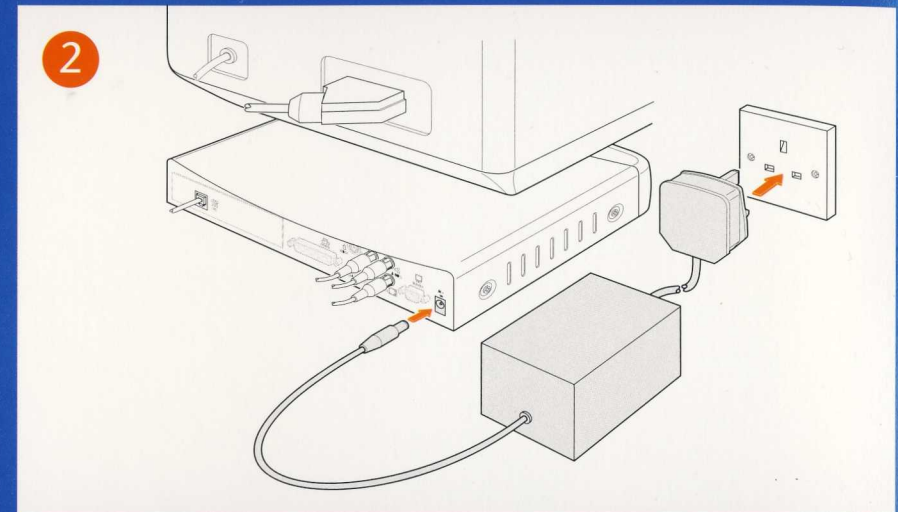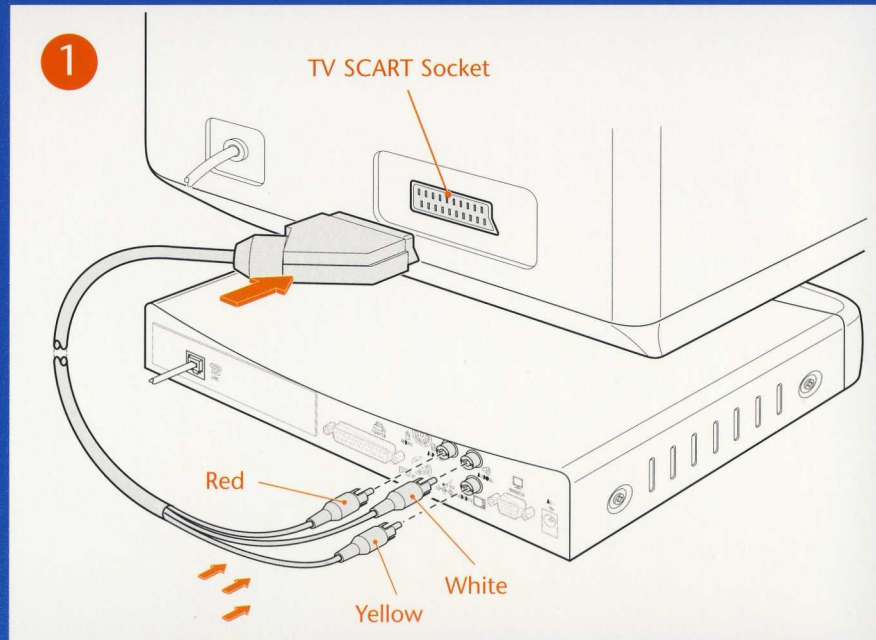


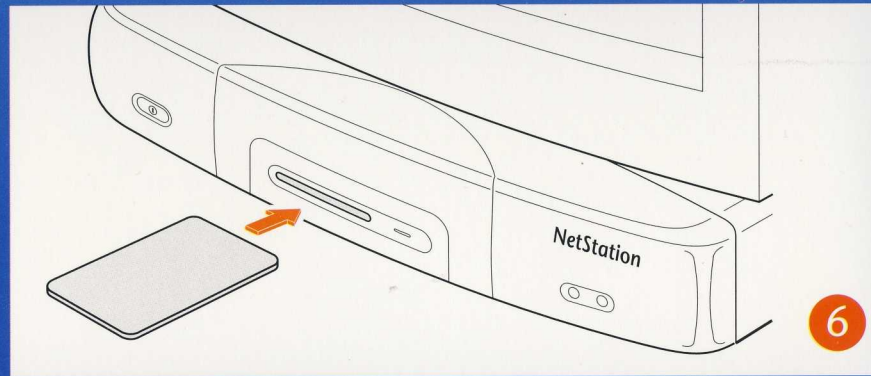
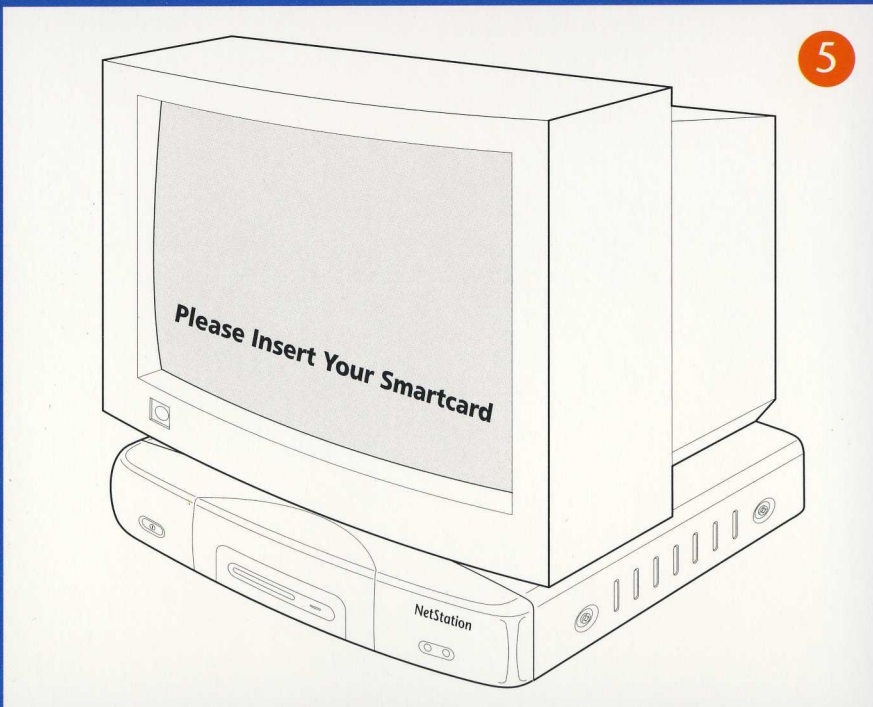
Your NetStation® includes a 10 metre phone cable and a two-way adaptor plug that allows you to keep your phone connected to the same line.

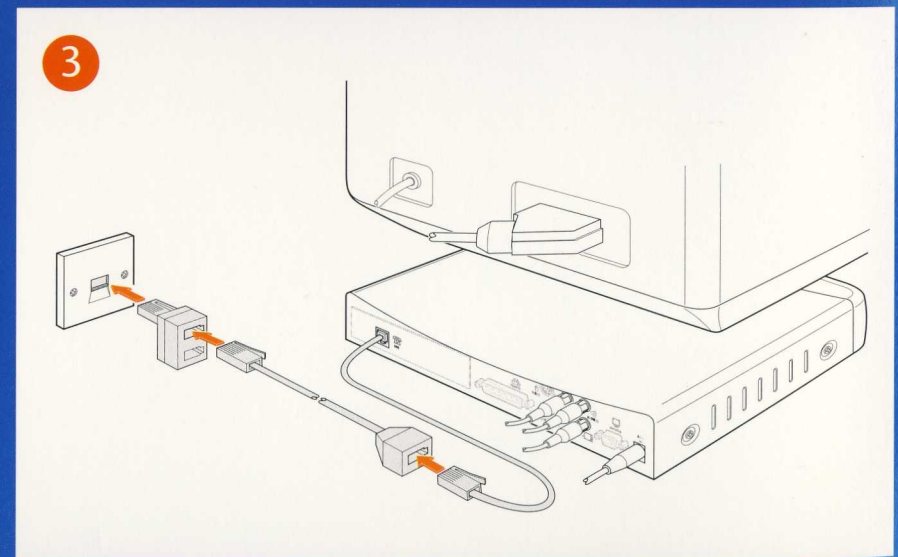

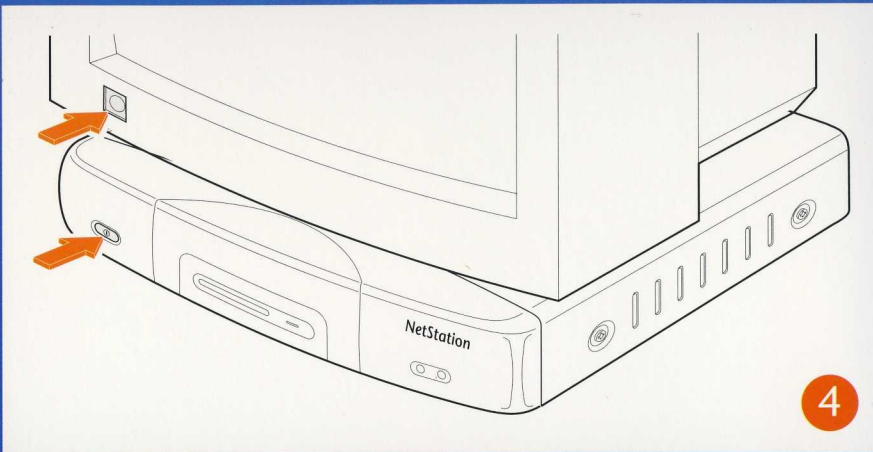

Switch on your NetStation® and the TV.

Switch to the AV channel (sometimes marked TV/AV, TV/video or ). You will see the 'Please insert your smartcard' message when the TV is receiving the NetStation® signal correctly. Refer to your TV manual for further details.



Insert your smart card into your NetStation®. Ensure that the gold contacts are facing down and that they enter the slot first. **Now follow the instructions supplied by your Internet Service Provider.**

Quick Troubleshooting

No lights showing on the NetStation® front panel.

- Is the power adaptor plugged into the nearby mains socket?
- Is the mains socket switched on?
- Is the power adaptor plugged fully into the socket on back of panel?
- Remove the power adaptor plug from its socket and replace it after a few seconds.

Continuous red light showing on NetStation® but no image on TV screen.

- Press the standby button on the NetStation® front panel.

Continuous green light showing on NetStation® but no image on the TV screen.

- Are the red, white and yellow phono plugs attached to the appropriate sockets?
- Is the SCART plug connected to the SCART socket on your TV?
- Is the AV channel selected on your TV?
- If there are two SCART sockets on your TV, is the appropriate AV channel selected for the NetStation® selection?

Further tips are given in Appendix D of the NetStation® guide.

Handset instructions on reverse.

NetStation


The IR Handset

Inserting the Batteries.


Before you can use your IR handset you need to insert three AAA batteries.

To insert the batteries:


1 On the underside of the IR handset open the battery cover as shown here.

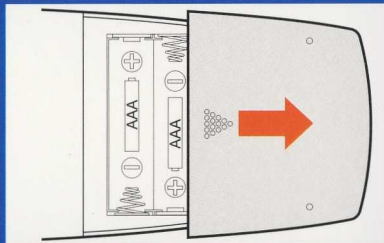

2 Install three AAA batteries into the compartment, ensuring that you observe the correct polarity positions.

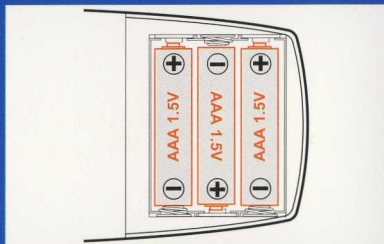

3 Replace the battery cover.

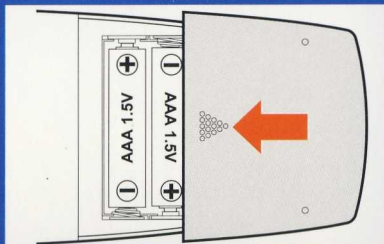

Arrow buttons: move the highlight box around the various links; move the cursor within the text boxes; and move across large web pages. The centre button performs the Select function

Reveals an on-screen menu options

Moves up/down the current screen by one line


Moves to the previously displayed page

Moves to the next page in a sequence that you have previously viewed

Selects alternate characters when used in conjunction with keys in the numeric section

Enters a space at the cursor position

Displays on-screen help

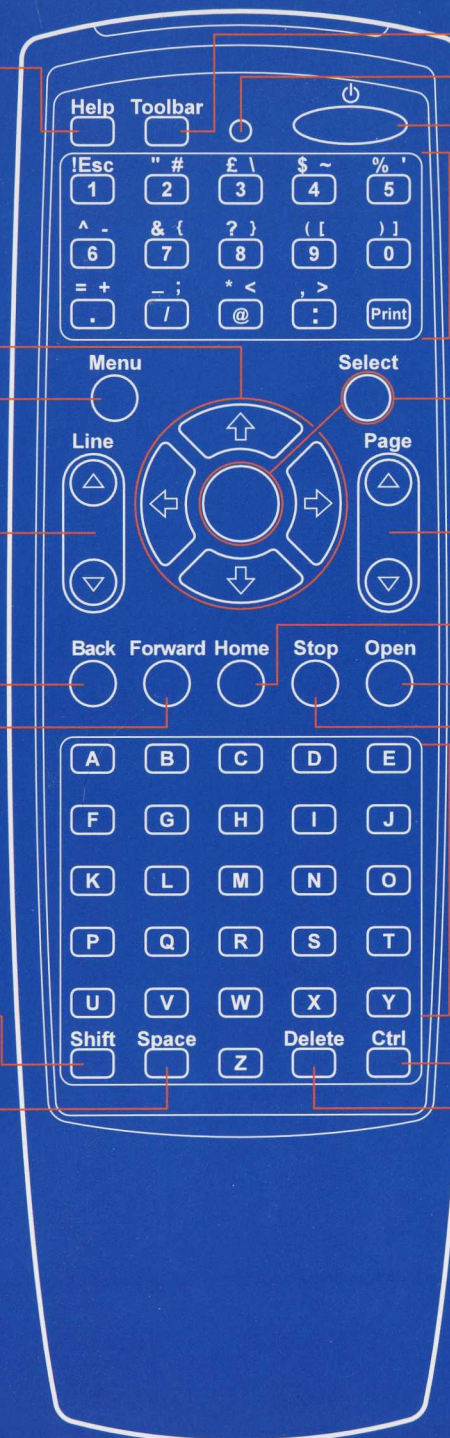

Displays/Hides the on-screen toolbar

Indicates programming mode selected

Switches the NetStation on/into standby

Numeric keys plus special characters: press **Shift** then a key to enter the character shown above and to the *left* of any key; press **Ctrl** then a key to enter the character shown above and to the *right* of any key

These confirm a choice or selection. These buttons have the most important function on the IR handset

Move up/down the current screen by one page length

Returns you to your ISP's home page

Displays a box for you to enter a URL

Stops loading the current page

Alpha character keys

Selects alternate characters when used in conjunction with keys in the numeric section

Deletes the character to the left of the cursor

NetStation
Net Products