


## HOW TO SOLDER WIRES TO IC76

1. Solder brown wire to pin 11.
2. Solder red wire to pin 12.
3. Solder orange wire to pin 13.
4. Solder yellow wire to pin 14.

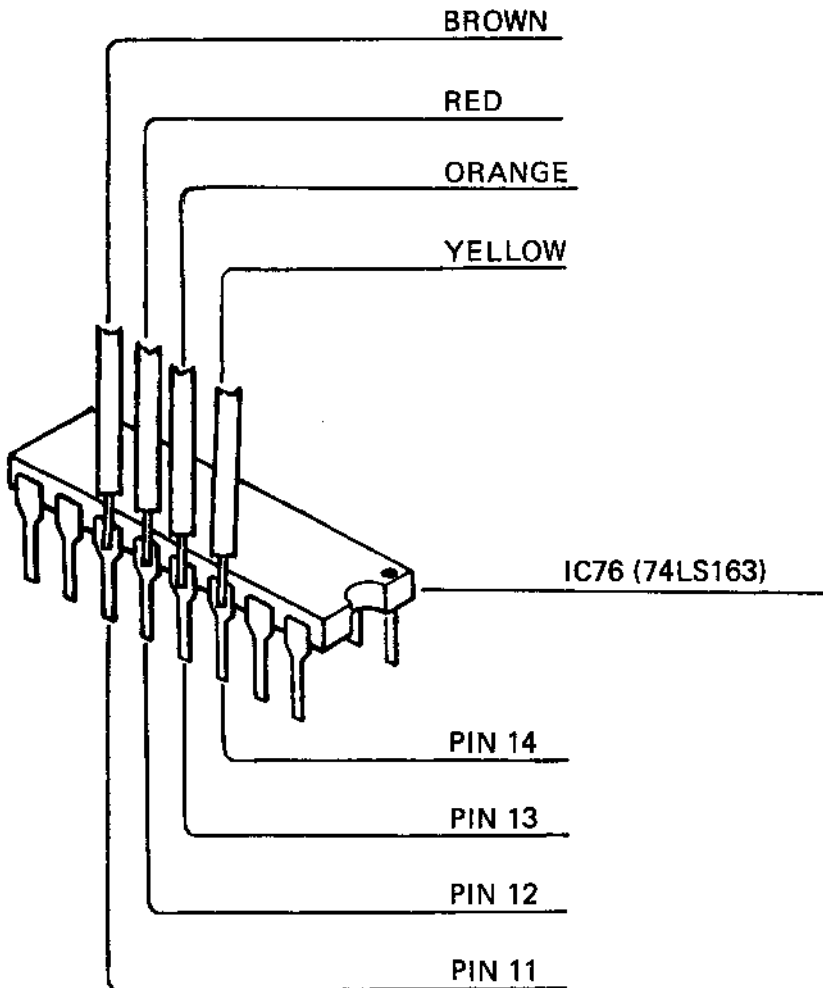

AFTER HAVING CONNECTED THE ROM BOARD PLEASE MAKE SURE THAT THE CONNECTIONS ARE TO THE DRAWING BELOW.

